



## INSTALLATION INSTRUCTIONS (Page 1 of 5)

### LOCKSET CONTENTS

1. OUTSIDE PLATE
2. INSIDE PLATE
3. DEADBOLT
4. LATCH
5. JAMB DEADBOLT PLATE
6. JAMB LATCH PLATE
7. LEVER HANDLES (2)
8. HANDLE SPINDLE
9. KEYS (2)
10. SCREWS FOR DEADBOLT & LATCH AND JAMB DEADBOLT & LATCH PLATES (8)
11. PLATE SCREWS (2)
12. LEVER HANDLE MOUNTING SCREWS (2)



### REQUIRED TOOLS

1. PHILLIPS HEAD SCREWDRIVER





## INSTALLATION INSTRUCTIONS (Page 2 of 5)

### LOCKSET MOUNTING INSTRUCTIONS

#### STEP 1

Insert the DEADBOLT (#3) in the up position into the top hole on the edge of the door. Insert the LATCH (#4) into the bottom hole on the edge of the door. The LATCH (#4) should be oriented so that the beveled end is facing the direction the door closes.

#### NOTE:

The DEADBOLT (#3) and LATCH (#4) are both adjustable. They are initially set up for a 2-3/8" setback, but may be adjusted to 2-3/4".


DEADBOLT



LATCH



#### STEP 1

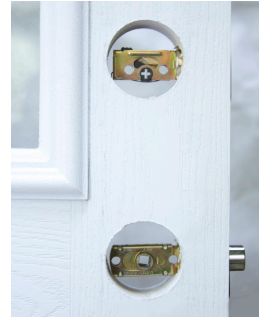

#### STEP 2

Use screwdriver to attach DEADBOLT (#3) and LATCH (#4) to the door edge using the DEADBOLT AND LATCH SCREWS (#10) (four).


#### STEP 2



#### STEP 3

Use screwdriver to attach JAMB DEADBOLT (#5) and LATCH PLATES (#6) to jamb using the JAMB DEADBOLT AND LATCH PLATE SCREWS (#10) (four).

#### STEP 3

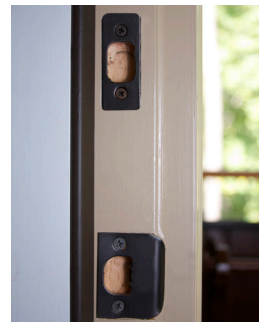



## INSTALLATION INSTRUCTIONS (Page 3 of 5)


### LOCKSET MOUNTING INSTRUCTIONS (Continued)

#### STEP 4

Insert the LEVER HANDLES (#7) into the OUTSIDE (#1) and INSIDE PLATES (#2). NOTE: When mounted, 1) each LEVER HANDLE (#7) should point away from the door opening, and 2) the curve of each LEVER HANDLE (#7) should be facing upward.

#### NOTE:

The curved edge of the LEVER HANDLE (#7) should be facing up and pointing away from the door opening.

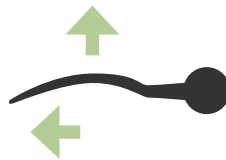


#### STEP 4



#### STEP 5

Once each LEVER HANDLE (#7) has been inserted properly into the OUTSIDE (#1) and INSIDE PLATES (#2), secure them to the plates with a screwdriver using the LEVER HANDLE MOUNTING SCREWS (#12) (two).

#### STEP 5

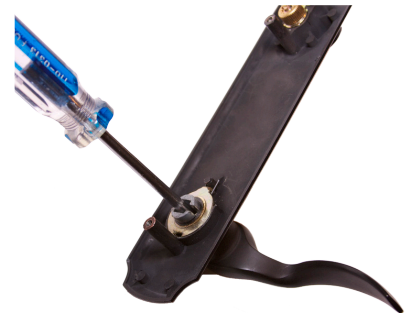

#### STEP 6

The OUTSIDE PLATE (#1) is supplied with a gasket that fits under the plate to prevent water & air intrusion.

#### STEP 6





## INSTALLATION INSTRUCTIONS (Page 4 of 5)

### LOCKSET MOUNTING INSTRUCTIONS (Continued)

#### STEP 7

Insert the HANDLE SPINDLE (#8), as shown at right, into the bottom of the OUTSIDE PLATE (#1).

#### STEP 7



#### STEP 8

Slide OUTSIDE PLATE (#1) into DEADBOLT (#3) and LATCH (#4) from outside of door.

#### STEP 8



#### STEP 9

With a screwdriver, attach INSIDE PLATE (#2) to jamb using the PLATE SCREWS (#11) (two).

#### STEP 9





## INSTALLATION INSTRUCTIONS (Page 5 of 5)

### LOCKSET MOUNTING INSTRUCTIONS (Continued)

#### STEP 10

Insert KEYS (#9) to test DEADBOLT (#3). Installation complete!

**NOTE:**

Duplicate keys may be made using a Kwikset standard KW1 key

#### STEP 10

